

5520 Burnpot Housing Gasket Replacement

-
Make sure your appliance is not burning and is cool to the touch.

-
Open the front door and remove the two screws with a 3/8" wrench or socket.

-
Remove the ashpan and slide the burnpot housing out towards the front of the stove.

-
Slide gasket down behind the burnpot housing as shown. The slot in the gasket will have to be worked over the igniter tube. Make sure gasket does not cover the opening in either tube.

-
Once the gasket is in place, replace the two screws and tighten them down.

-
Approximately 1/8" of gasket should be visible around the top and sides of the burnpot housing when finished.

