

Remove the 4 glass retainers that are secured by (6) phillips head screws.

-

Place the two 4" strips of window glass gasket on each side the bottom of the glass in the locations as demonstrated by the red lines in the picture.

-

Replace glass and glass retainers then carefully tighten back the screws.