
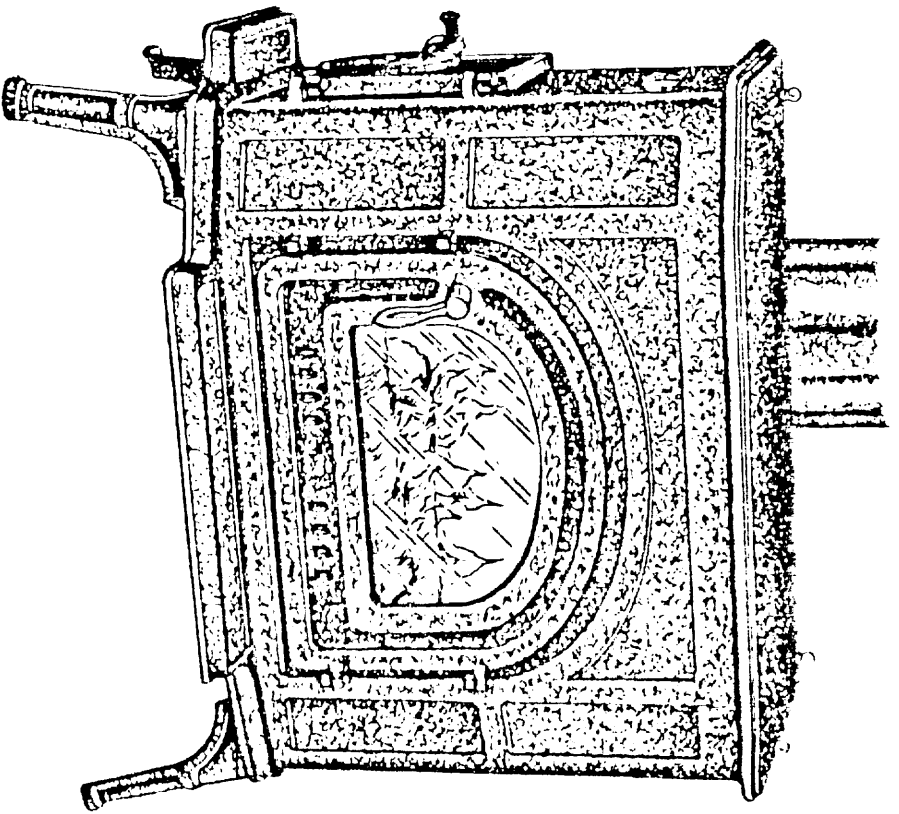


TO INSTALL:

1. REMOVE YOUR ORIGINAL FRONT DOORS.
2. LINE UP THE GLASS DOOR WITH THE HINGE LUGS ON THE RIGHT SIDE OF THE FRONT AND INSERT HINGE PINS.
3. YOU MAY HAVE TO SLIGHTLY ADJUST THE INNER LATCH ON THE HANDLE ASSEMBLY TO GET A GOOD FIT. LOOSEN THE SET SCREW, POSITION THE LATCH AND RETIGHTEN THE SET SCREW.

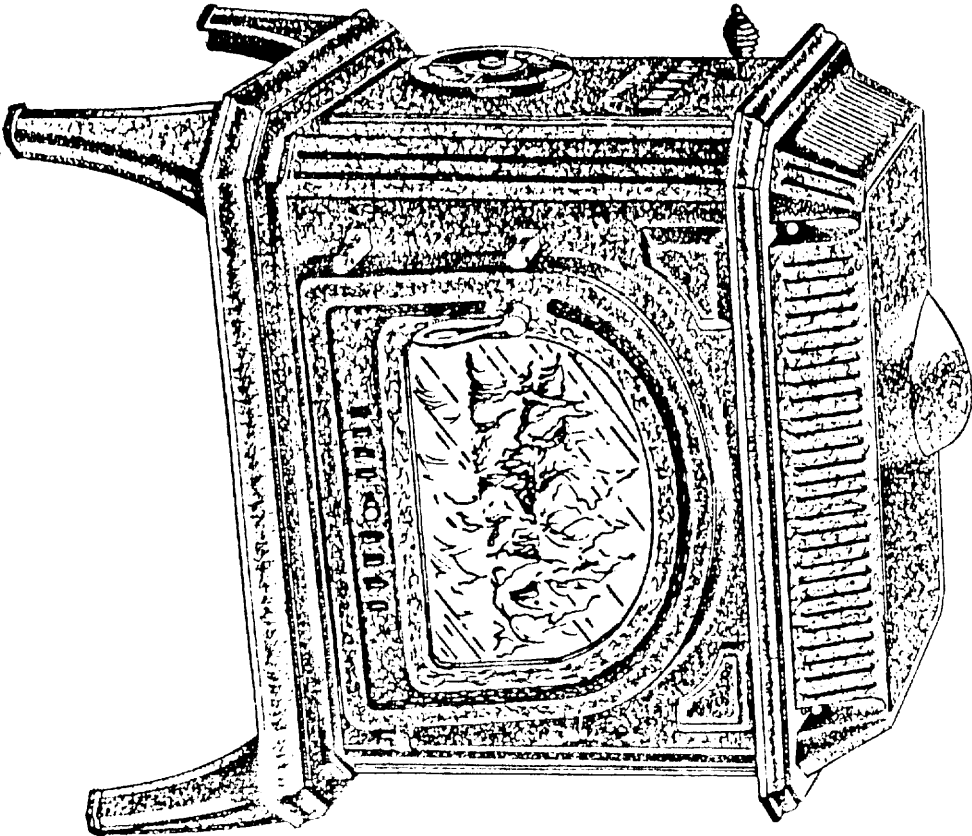


YOUR DEALER CAN GIVE YOU TIPS ON
INSTALLING YOUR FIRE SCREEN WHEN
YOU PICK IT UP. WE HOPE YOU EN-
JOY THIS BEAUTIFUL ADDITION TO
YOUR UPLAND WOODSTOVE !

UPLAND
WOODSTOVES

UPLAND

WOODSTOVES

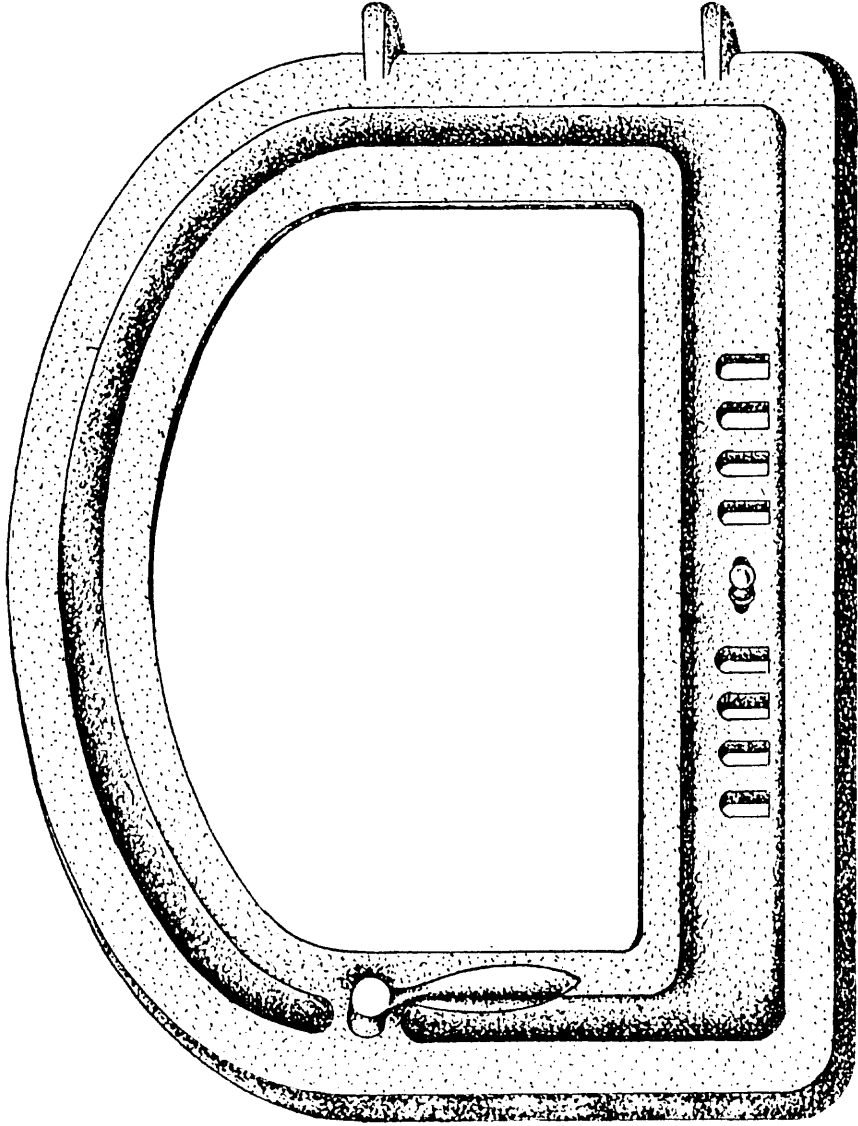

Our Glass Firescreen ...

- * Allows you to enjoy a fireplace fire and the radiant heat from our cast iron stoves.
- * Contains sparks within the stove better than just a screen.
- * Uses Corning Pyroceram glass, a proven performer !
- * Fits all 107 and 207 stoves.

Glass Fireplace Screen

Telephone: (607) 656-4156

Two Green Street P.O. Box 87 Greene, New York 13778