

P/N 506033-05 Rev. NC, 08/2008

32" ZC SURROUND KIT CAT. NO. H7232, MODEL PI40-32ZCFK

INSTALLATION INSTRUCTIONS FOR INSTALLING THE THREE INCH DEEP, 41" WIDTH X 29" HEIGHT, BLACK SURROUND ASSEMBLY FOR USE WITH THE WINSLOW™ PI40 PELLET FIREPLACE INSERT.



KIT CONTENTS (See Figure 1):

Please ensure that all these parts are in the box

1 ea. Left Surround Panel Assembly

1 ea. Right Surround Panel Assembly

1 ea. Top Surround Panel Assembly

1 ea. Instruction Sheet

TOOLS / SUPPLIES NEEDED:

Flat Screwdriver



GENERAL INFORMATION

This surround assembly positions the Winslow pellet insert 3" forward onto the hearth which allows the Winslow pellet insert to fit into fireplaces that have a narrower width in the front. Normally the control board would need to fit into the fireplace cavity with a minimum width of 36" in the front. With this kit installed, the control board will fit to the right side of the fireplace opening which allows the insert to fit into a fireplace with a minimum width of 32" in the front. This surround assembly is offered in one size only, as shown in *Figure 1*. There are currently no trim kits available for this surround assembly.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.


PLEASE TAKE NOTE THAT BECAUSE THE APPLIANCE WILL BE POSITIONED IN A MORE FORWARD POSITION ON THE EXISTING HEARTH, ADDITIONAL FLOOR PROTECTION MAY NEED TO BE ADDED TO THE FRONT OF THE APPLIANCE (SEE FIGURE 2).

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.


INSTALLATION INSTRUCTIONS

To install the surround panels:

- Remove the side doors (see Figure 4) to access the surround mounting brackets. Remove the speed nuts from the parts bag found in the firebox. Install the six speed nuts (with the flat surface forward) on the six surround mounting bracket holes, three on each side of the insert. A flat-bladed screwdriver may help in installing the nuts. See Figure 1.
- Screw the six 1/4" truss head screws partially into the speed nuts (see A in *Figure 1*).
- 3. The side surround panel with the small access door for the control board goes on the right side of the insert (see *Figure 3*). Slide the slots in the side surround panels and top surround panels behind the heads of the truss screws. Tighten all six truss screws after shifting surround panels to eliminate space between the side and top surround panels.

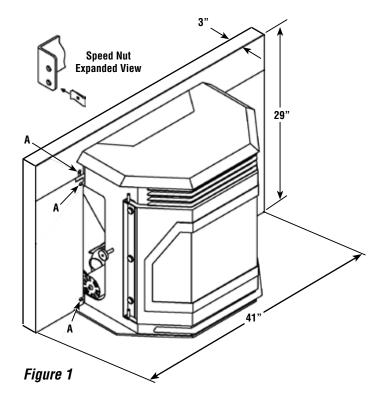

Hearth Protection (shaded gray)

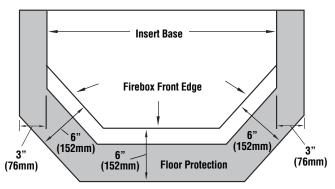

IMPORTANT NOTE: When installed, ensure that there is adequate floor protection to the front and sides of the appliance as shown here and detailed in the Installation and Operation Manual.

Figure 2

Notes:

- Level the insert per instructions on Page 10 of the Installation and Operation Manual.
- See Page 7 of the Installation and Operation Manual for information on hearth extension requirements.

Side Door Removal See Figure 4

- 1. Swing door open
- 2. Lift door up, and
- 3. Pull bottom of the door out and down pulling the top hinge pin out of the retaining hole in the top hinge bracket.

To reinstall the door, slide the pin on the top of the door up and into the hole in the upper hinge bracket. Slide the pin on the bottom of the door into the hole in the pedestal base and rotate the door closed.

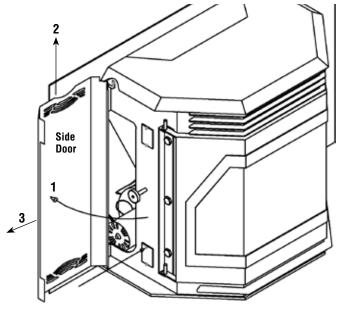


Figure 4

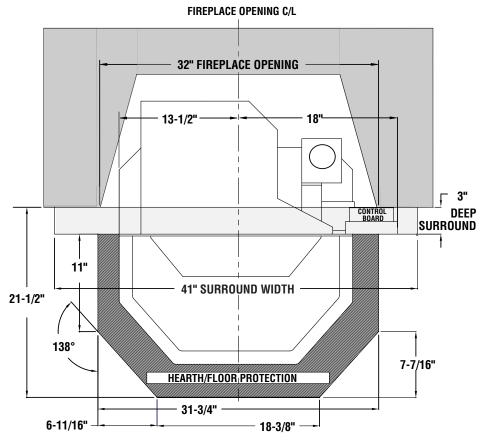


Figure 3

NOTE: DIAGRAMS AND ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

